

PER:
FOR:

AUDI (DE)
FORD (DE)
PORSCHE (DE)
SEAT (ES)
SKODA (CZ)
VOLKSWAGEN (DE)




- | | | |
|----------------|--|--|
| HU66MH | HU66P | HU66AT5
HU66AT6 |
| HU66EHP | HU66T5
HU66T6 | HU66CT5 |
| HU66FH | HU66T10
HU66T15 | HU66DT5 |
| HU75T | HU66T23
HU66T26
HU66T28 | HU66CT6
HU66BT1
HU66BT15
HU66BT28 |

HUF (DE) - WITTE (DE)

STANDARD





D949907ZR
106 Jaw
Ganascia 106
106 Backe
Mâchoire 106
Quijada 106
Garra 106

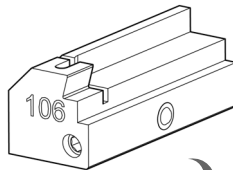

STANDARD



D949905ZR
107 Jaw
Ganascia 107
107 Backe
Mâchoire 107
Quijada 107
Garra 107

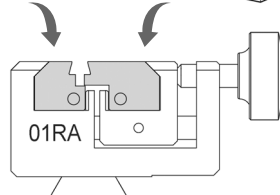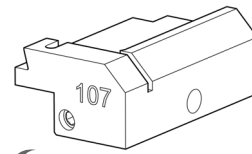

STANDARD



D953496ZR

Adapter A45
Adattatore A45
Adapter A45
Adaptateur A45
Adaptador A45
Adaptador A45

STANDARD



D747838ZB

Cutter 01LW
Fresa 01LW
Fräser 01LW
Fraise 01LW
Fresa 01LW
Fresa 01LW

OPTIONAL



D742606ZB


Cutter 01L
Fresa 01L
Fräser 01L
Fraise 01L
Fresa 01L
Fresa 01L

OR

OPTIONAL





D744023ZB
19J Jaw
Ganascia 19J
19J Backe
Mâchoire 19J
Quijada 19J
Garra 19J

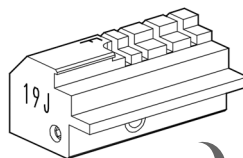

OPTIONAL



D943254ZR
02J Jaw
Ganascia 02J
02J Backe
Mâchoire 02J
Quijada 02J
Garra 02J

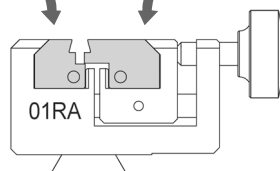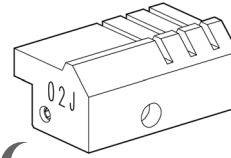

STANDARD



D747838ZB

Cutter 01LW
Fresa 01LW
Fräser 01LW
Fraise 01LW
Fresa 01LW
Fresa 01LW

OPTIONAL




D742606ZB

Cutter 01L
Fresa 01L
Fräser 01L
Fraise 01L
Fresa 01L
Fresa 01L

PER:
FOR:

BMW (DE)

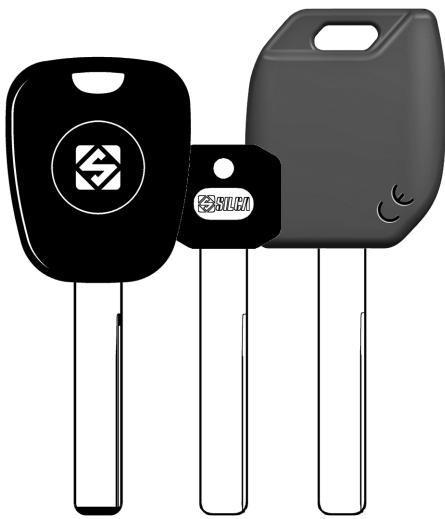


HU92RP **HU92RKP** **HU92RMH**

STANDARD



D949907ZR

106 Jaw
Ganascia 106
106 Backe
Mâchoire 106
Quijada 106
Garra 106


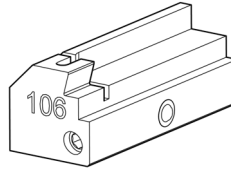


STANDARD




D949905ZR

107 Jaw
Ganascia 107
107 Backe
Mâchoire 107
Quijada 107
Garra 107

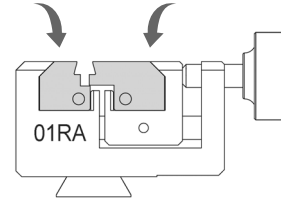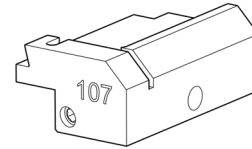

STANDARD



D747838ZB

Cutter 01LW
Fresa 01LW
Fräser 01LW
Fraise 01LW
Fresa 01LW
Fresa 01LW

OPTIONAL



D742606ZB

Cutter 01L
Fresa 01L
Fräser 01L
Fraise 01L
Fresa 01L
Fresa 01L


OR

OPTIONAL



D943253ZR

01J Jaw
Ganascia 01J
01J Backe
Mâchoire 01J
Quijada 01J
Garra 01J


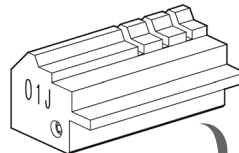


OPTIONAL



D743256ZB

04J Jaw
Ganascia 04J
04J Backe
Mâchoire 04J
Quijada 04J
Garra 04J

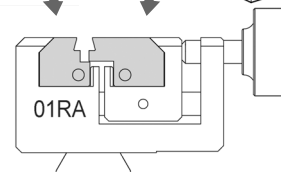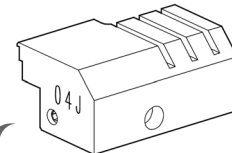

STANDARD



D747838ZB

Cutter 01LW
Fresa 01LW
Fräser 01LW
Fraise 01LW
Fresa 01LW
Fresa 01LW


OPTIONAL



D742606ZB

Cutter 01L
Fresa 01L
Fräser 01L
Fraise 01L
Fresa 01L
Fresa 01L

PER:
FOR: **CARRYBOY (AUS)**

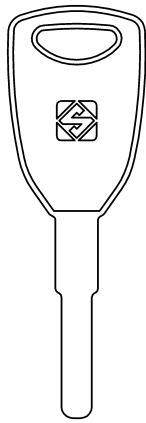

CRY2


(2T - 7W)

OPTIONAL **D7A4457ZB**


- CODE 131 Jaw
- CODE 131 Ganascia 131
- ◊ COPY 131 Backe
- ◊ COPY 131 Mâchoire 131
- ◊ COPY 131 Quijada 131
- ◊ COPY 131 Garra 131

OPTIONAL **D7A4462ZB**

- CODE 132 Jaw
- CODE 132 Ganascia 132
- ◊ COPY 132 Backe
- ◊ COPY 132 Mâchoire 132
- ◊ COPY 132 Quijada 132
- ◊ COPY 132 Garra 132

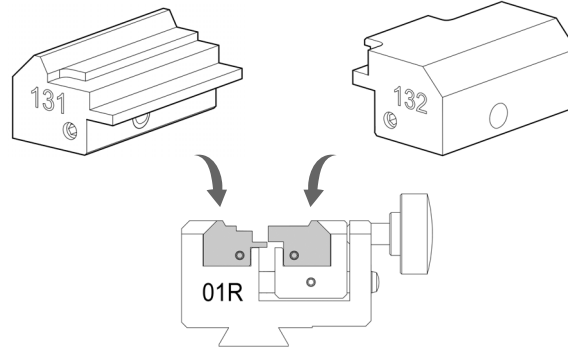


STANDARD

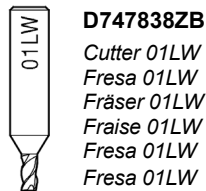

D747838ZB

- Cutter 01LW
- Fresa 01LW
- Fräser 01LW
- Fraise 01LW
- Fresa 01LW
- Fresa 01LW


OPTIONAL

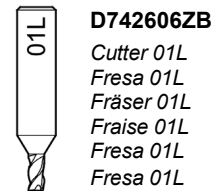

D742606ZB

- Cutter 01L
- Fresa 01L
- Fräser 01L
- Fraise 01L
- Fresa 01L
- Fresa 01L

PER:
FOR: **CITROËN (FR)**

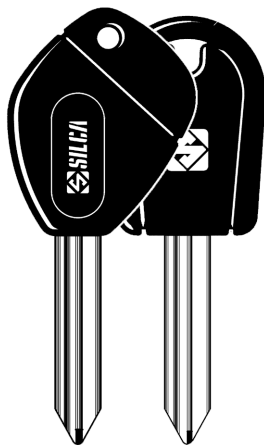

SX9CP SX9GP

SX9AP SX10BP

SX11BP


VALEO - SIMPLEX

OPTIONAL **D7A1623ZB**


- CODE 120 Jaw
- CODE 120 Ganascia 120
- ◊ COPY 120 Backe
- ◊ COPY 120 Mâchoire 120
- ◊ COPY 120 Quijada 120
- ◊ COPY 120 Garra 120

OPTIONAL **D7A1624ZB**

- CODE 121 Jaw
- CODE 121 Ganascia 121
- ◊ COPY 121 Backe
- ◊ COPY 121 Mâchoire 121
- ◊ COPY 121 Quijada 121
- ◊ COPY 121 Garra 121

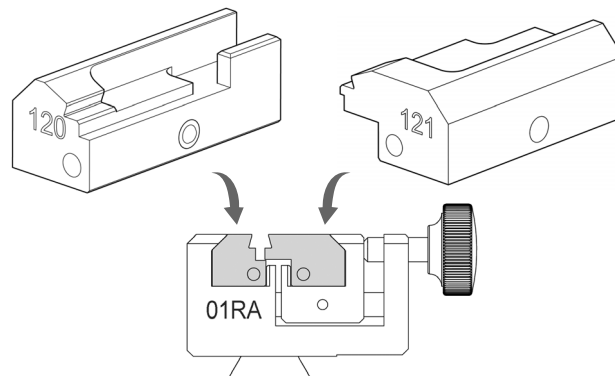

STANDARD




D749946ZB

- Cutter 12L
- Fresa 12L
- Fräser 12L
- Fraise 12L
- Fresa 12L
- Fresa 12L

PER:
FOR:

FORD (DE)

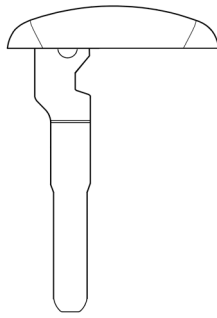


(Escape model)
(2T-7W)

STANDARD



D949907ZR

106 Jaw
Ganascia 106
106 Backe
Mâchoire 106
Quijada 106
Garra 106


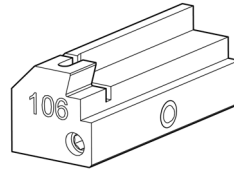


STANDARD




D949905ZR

107 Jaw
Ganascia 107
107 Backe
Mâchoire 107
Quijada 107
Garra 107

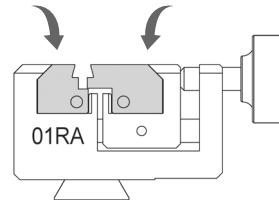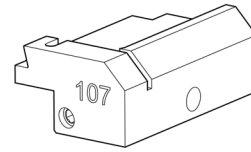

STANDARD



D747838ZB

Cutter 01LW
Fresa 01LW
Fräser 01LW
Fraise 01LW
Fresa 01LW
Fresa 01LW

OPTIONAL



D742606ZB

Cutter 01L
Fresa 01L
Fräser 01L
Fraise 01L
Fresa 01L
Fresa 01L


OR

OPTIONAL



D741485ZB

A34 adapter
Adattatore A34
Adapter A34
Adaptateur A34
Adaptador A34
Adaptador A34




OPTIONAL



D943253ZR

01J Jaw
Ganascia 01J
01J Backe
Mâchoire 01J
Quijada 01J
Garra 01J


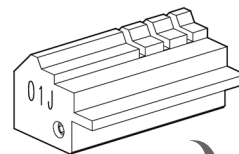


OPTIONAL



D943254ZR

02J Jaw
Ganascia 02J
02J Backe
Mâchoire 02J
Quijada 02J
Garra 02J

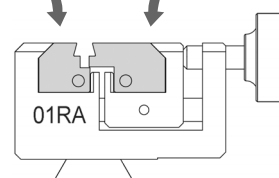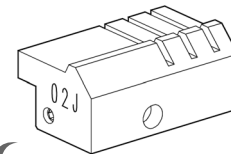

STANDARD



D747838ZB

Cutter 01LW
Fresa 01LW
Fräser 01LW
Fraise 01LW
Fresa 01LW
Fresa 01LW

OPTIONAL




D742606ZB

Cutter 01L
Fresa 01L
Fräser 01L
Fraise 01L
Fresa 01L
Fresa 01L

PER:
FOR:

FORD (DE)

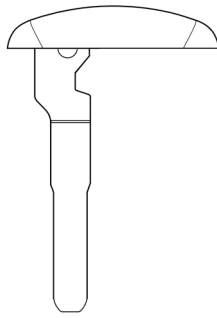

(Escape model)
(2T-7W)

OR

OPTIONAL



D744023ZB

19J Jaw
Ganascia 19J
19J Backe
Mâchoire 19J
Quijada 19J
Garra 19J




OPTIONAL



D943254ZR

02J Jaw
Ganascia 02J
02J Backe
Mâchoire 02J
Quijada 02J
Garra 02J

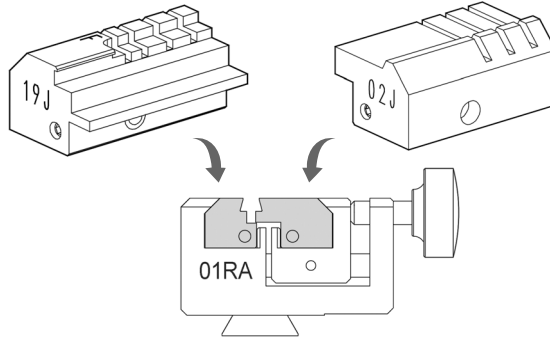

STANDARD



D747838ZB

Cutter 01LW
Fresa 01LW
Fräser 01LW
Fraise 01LW
Fresa 01LW
Fresa 01LW

OPTIONAL




D742606ZB

Cutter 01L
Fresa 01L
Fräser 01L
Fraise 01L
Fresa 01L
Fresa 01L

PER:
FOR:

FORD (EU+USA)

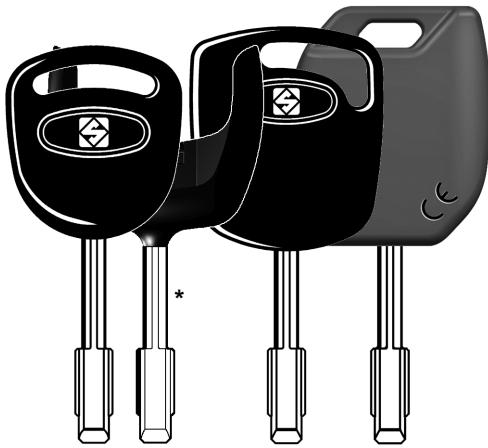

FO21P FO21AP FO21T3 FO21MH

FO21EH1
FO21EH2


FO21T3M
FO21T7
FO21T17
FO21TE
FO21FH

OPTIONAL



D743276ZB

03R Clamp
Morsetto 03R
03R Spannbacke
Etau 03R
Mordaza 03R
Mordente 03R

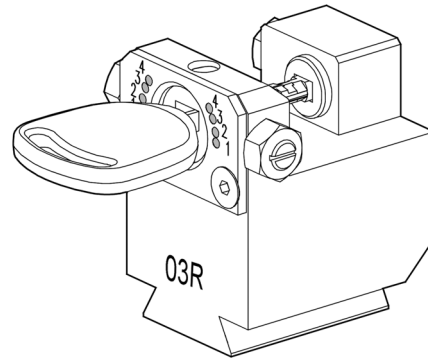

STANDARD



D747838ZB

Cutter 01LW
Fresa 01LW
Fräser 01LW
Fraise 01LW
Fresa 01LW
Fresa 01LW

OPTIONAL



D742606ZB

Cutter 01L
Fresa 01L
Fräser 01L
Fraise 01L
Fresa 01L
Fresa 01L

* **IMPORTANT!** Key blank to be applied to the original remote control
(the remote control includes the transponder chip)

TIBBE (D)
VALEO (F)

PER:
FOR:

HONDA (JP)




(Emergency key)
(N-BOX - N-ONE - N-VAGON)

OPTIONAL



D745037ZB

52J Jaw
Ganascia 52J
52J Backe
Mâchoire 52J
Quijada 52J
Garra 52J


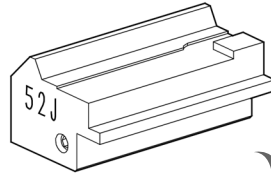


OPTIONAL



D745039ZB

53J Jaw
Ganascia 53J
53J Backe
Mâchoire 53J
Quijada 53J
Garra 53J

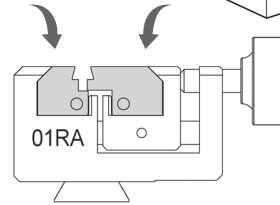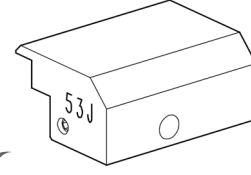

STANDARD



D747838ZB

Cutter 01LW
Fresa 01LW
Fräser 01LW
Fraise 01LW
Fresa 01LW
Fresa 01LW

OPTIONAL




D742606ZB

Cutter 01L
Fresa 01L
Fräser 01L
Fraise 01L
Fresa 01L
Fresa 01L

PER:
FOR:

HONDA (JP)




(Emergency key 2020)

OPTIONAL



D7A2990ZB

122 Jaw
Ganascia 122
122 Backe
Mâchoire 122
Quijada 122
Garra 122


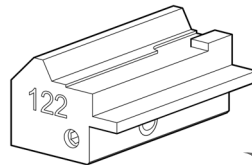


OPTIONAL




D7A2991ZB

123 Jaw
Ganascia 123
123 Backe
Mâchoire 123
Quijada 123
Garra 123

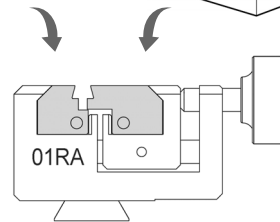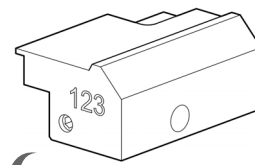

OPTIONAL




D7A2832ZB

Cutter 13LW
Fresa 13LW
Fräser 13LW
Fraise 13LW
Fresa 13LW
Fresa 13LW

PER:
FOR:

HUF (DE)

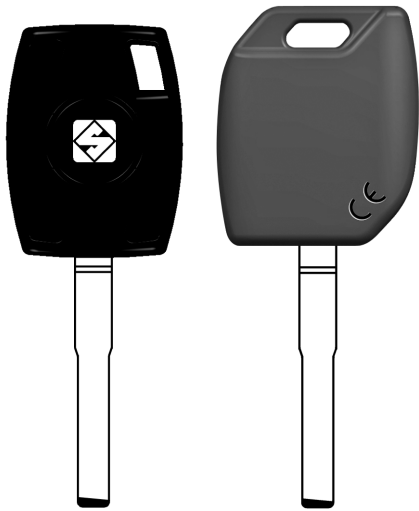

■
HU101T17
HU101T20
HU101TE

■
HU101MH


HU101T
HU101AP
HU101EH
HU101FH

STANDARD



D949907ZR

106 Jaw
Ganascia 106
106 Backe
Mâchoire 106
Quijada 106
Garra 106


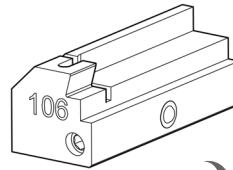


STANDARD



D949905ZR

107 Jaw
Ganascia 107
107 Backe
Mâchoire 107
Quijada 107
Garra 107

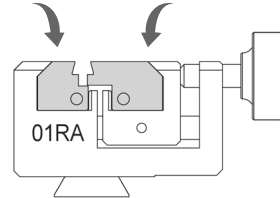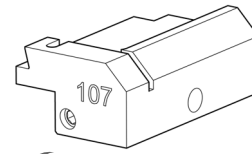

STANDARD



D747838ZB

Cutter 01LW
Fresa 01LW
Fräser 01LW
Fraise 01LW
Fresa 01LW
Fresa 01LW

OPTIONAL



D742606ZB

Cutter 01L
Fresa 01L
Fräser 01L
Fraise 01L
Fresa 01L
Fresa 01L


OR

OPTIONAL



D744023ZB

19J Jaw
Ganascia 19J
19J Backe
Mâchoire 19J
Quijada 19J
Garra 19J


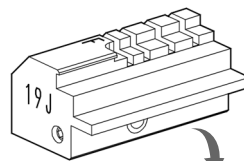


OPTIONAL



D943254ZR

02J Jaw
Ganascia 02J
02J Backe
Mâchoire 02J
Quijada 02J
Garra 02J

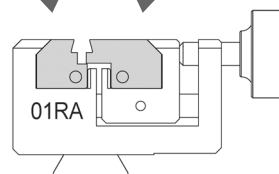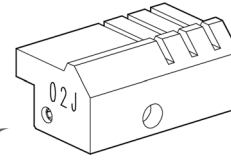

STANDARD



D747838ZB

Cutter 01LW
Fresa 01LW
Fräser 01LW
Fraise 01LW
Fresa 01LW
Fresa 01LW

OPTIONAL



D742606ZB

Cutter 01L
Fresa 01L
Fräser 01L
Fraise 01L
Fresa 01L
Fresa 01L

PER:
FOR:

HUF (DE)



■
HU152S16

VOLVO



OPTIONAL



D744023ZB


19J Jaw
Ganascia 19J
19J Backe
Mâchoire 19J
Quijada 19J
Garra 19J

OPTIONAL



D943254ZR

02J Jaw
Ganascia 02J
02J Backe
Mâchoire 02J
Quijada 02J
Garra 02J

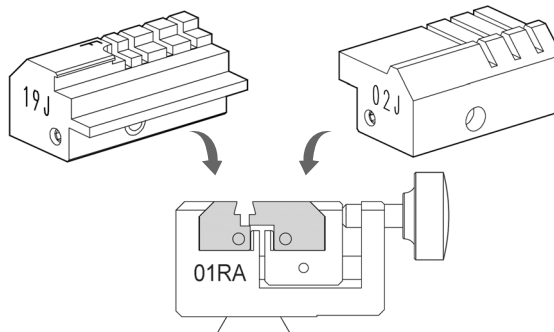

STANDARD



D747838ZB

Cutter 01LW
Fresa 01LW
Fräser 01LW
Fraise 01LW
Fresa 01LW
Fresa 01LW

OPTIONAL



D742606ZB

Cutter 01L
Fresa 01L
Fräser 01L
Fraise 01L
Fresa 01L
Fresa 01L

PER:
FOR:

HUF (DE)



HU162T
(4T - 8W)


VOLKSWAGEN
SKODA
AUDI

STANDARD



D949907ZR

106 Jaw
Ganascia 106
106 Backe
Mâchoire 106
Quijada 106
Garra 106


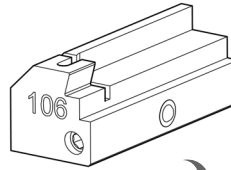


STANDARD



D949905ZR

107 Jaw
Ganascia 107
107 Backe
Mâchoire 107
Quijada 107
Garra 107

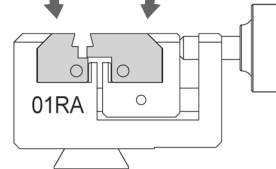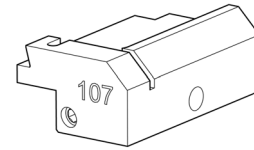

STANDARD



D747839ZB

Cutter 02LW
Fresa 02LW
Fräser 02LW
Fraise 02LW
Fresa 02LW
Fresa 02LW

OPTIONAL



D743671ZB

Cutter 02L
Fresa 02L
Fräser 02L
Fraise 02L
Fresa 02L
Fresa 02L


OR

OPTIONAL



D746461ZB

56J Jaw
Ganascia 56J
56J Backe
Mâchoire 56J
Quijada 56J
Garra 56J


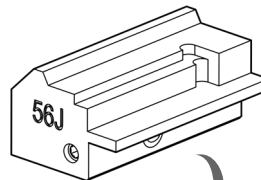


OPTIONAL



D746467ZB

57J Jaw
Ganascia 57J
57J Backe
Mâchoire 57J
Quijada 57J
Garra 57J

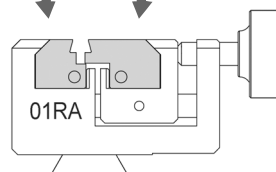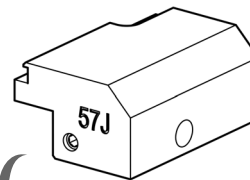

STANDARD



D747839ZB

Cutter 02LW
Fresa 02LW
Fräser 02LW
Fraise 02LW
Fresa 02LW
Fresa 02LW

OPTIONAL



D743671ZB

Cutter 02L
Fresa 02L
Fräser 02L
Fraise 02L
Fresa 02L
Fresa 02L

PER:
FOR: **MERCEDES (DE)**



HU41P

HU55P
HU61AP

HU64P
HU64T
HU65AP


HUF (D)

STANDARD



D949907ZR

106 Jaw
Ganascia 106
106 Backe
Mâchoire 106
Quijada 106
Garra 106


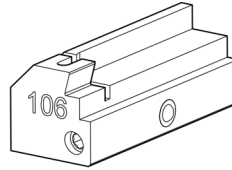


STANDARD




D949905ZR

107 Jaw
Ganascia 107
107 Backe
Mâchoire 107
Quijada 107
Garra 107

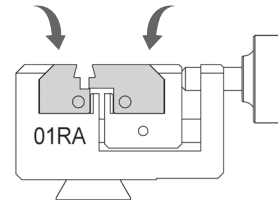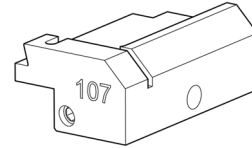

STANDARD



D747838ZB

Cutter 01LW
Fresa 01LW
Fräser 01LW
Fraise 01LW
Fresa 01LW
Fresa 01LW

OPTIONAL



D742606ZB

Cutter 01L
Fresa 01L
Fräser 01L
Fraise 01L
Fresa 01L
Fresa 01L


OR

OPTIONAL



D943253ZR

01J Jaw
Ganascia 01J
01J Backe
Mâchoire 01J
Quijada 01J
Garra 01J


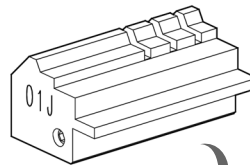


OPTIONAL




D743256ZB

04J Jaw
Ganascia 04J
04J Backe
Mâchoire 04J
Quijada 04J
Garra 04J

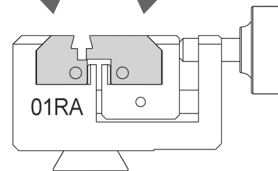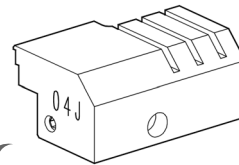

STANDARD



D747838ZB

Cutter 01LW
Fresa 01LW
Fräser 01LW
Fraise 01LW
Fresa 01LW
Fresa 01LW

OPTIONAL



D742606ZB

Cutter 01L
Fresa 01L
Fräser 01L
Fraise 01L
Fresa 01L
Fresa 01L

PER: **TUBULAR KEYS**
 FOR: **CHIAVI TUBOLARI**
STECKSCHLÜSSEL
CLÉS TUBULAIRES
LLAVES TUBOLARES

AGA (ES)
BILMA (ES)

BIL1T

CHICAGO (USA)

CH9T
 CH16T (9.2)
 CH17T (10)

L&F (GB)
KENSTAN (USA)

CH9T

MERONI (IT)


MER22T (9.50)
 MER25T (9.50)

P.CORTELLEZZI (IT)

PC12T (9.60)
 PC12TP (9.60)
 PC15T (9.60)
 PC15TP (9.60)

SILCA (IT)

SLC1TP (9.60)
 SLC2TP (9.60)


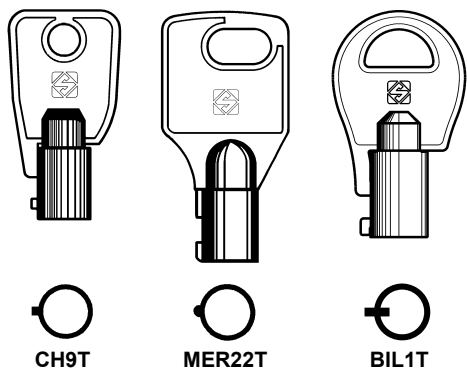


OPTIONAL



D743275ZB

02R Clamp
Morsetto 02R
02R Spannbacke
Etau 02R
Mordaza 02R
Mordente 02R

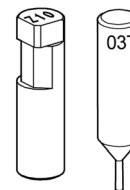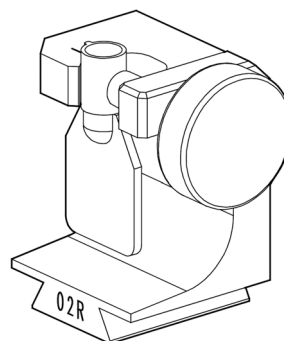

OPTIONAL



D743672ZB

Cutter 03L
Fresa 03L
Fräser 03L
Fraise 03L
Fresa 03L
Fresa 03L